


Regostar 150 Part List




Regostar Service Parts F01

Part No.	Group	Code (US)	Item	QTY
F01 1		33100-BWS-9000	LIGHT ASSY HEAD	1
F01 2		33110-BWS-9000	Front Headlight Protecting Cover	1
F01 3		33102-BWS-9000	SHIELD HEADLIGHT	1
F01 4		33101-BWS-9000	REFLECTOR HEADLIGHT	1
F01 5		34901-FR-9000	BULB HEADLIGHT 12V 25/25W	2
F01 6		34903-FR-9000	SIDELIGHTS BULB 12V 5W	2
F01 7		33103-BWS-9000	CASE HEADLIGHT	1
F01 9		93401-42012-03	SCREW TAPPING 4.2*12(G)	5

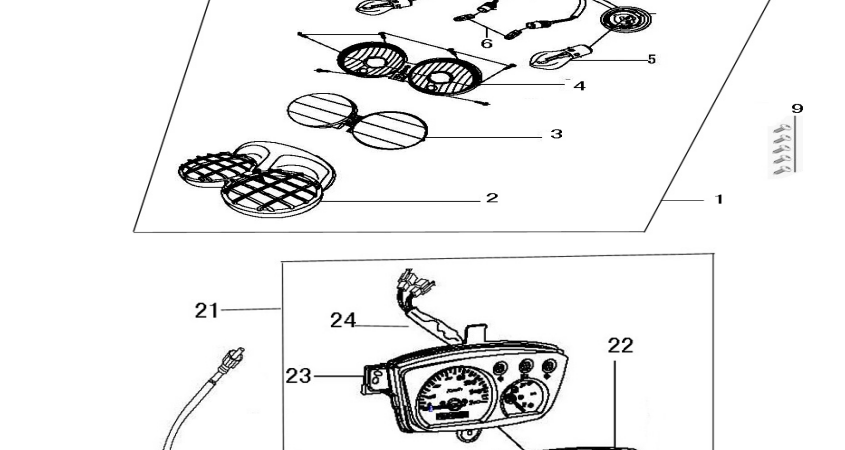


Regostar Service Parts F02

Part No.	Group	Code (US)	Item	QTY
F02 21		37200-BWS-E000	SPEED METER ASSY	1
F02 22		37119-BWS-9000	LENS	1
F02 23		37204-BWS-E000	DUAL FUEL METER & FUEL	1
F02 24		37205-BWS-9000	SP & FUEL METER COMP	1
F02 25		34908-FR-9000	BULB WEDGE BASE	3
F02 26		34909-FR-9000	BULB WEDGE BASE	2
F02 27		37220-BWS-9000	CASE ASSY	1
F02 28		37224-BWS-9000	SOCKET COMP METER	1
F02 29		44830-BWS-9000-B	CABLE COMP SPDMT	1
F02 30		93401-48016-03	SCREW TAPPING 4.8*16(G)	2

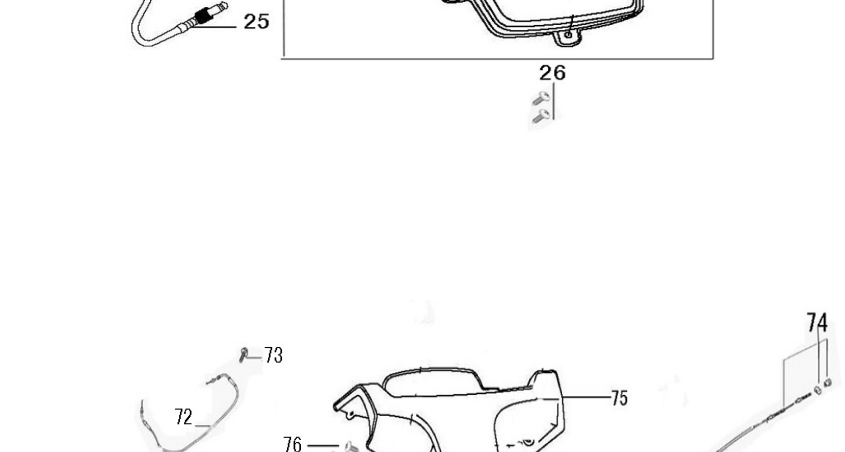


Regostar Service Parts F03

Part No.	Group	Code (US)	Item	QTY
F03 50		88120-F22-E000	MIRROR ASSY L BACK	1
F03 51		88110-F22-E000	MIRROR ASSY R BACK	1
F03 53		53100-BWS-9000	HANDLE COMP STRG	1
F03 54		95401-10000-03	NUT U 10MM(G)	1
F03 55		53125-FR-9000	COLLAR HANDLE SET	1
F03 56		92201-10050-03	BOLT FLANGE 10*50	1
F03 57		53166-BWS-9000	Grip L HANDLE	2
F03 58		53140-BWS-9000	GRIP COMP THROT	1
F03 60		53218-BWS-9000	L HANDLE COVER	1
F03 61		53217-BWS-9000	R HANDLE COVER	1
F03 62		95101-05000-03	NUT FLANGE 5MM	4
F03 63		93201-05012-03	SCREW PAN 5*12	4
F03 64		92701-06014-03	SCREW SPECIAL 6*14	2
F03 65		33420-BWS-9000	STAY WINKER ASSY L FR	1
F03 66		33421-BWS-9000	STAY WINKER ASSY R FR	1
F03 67		92101-06012-03	SCREW TAPPING 4.2*12	2
F03 68		53226-BWS-9000	STAY HANDLE COVER L	1
F03 69		53227-BWS-9000	STAY HANDLE COVER R	1
F03 70		93201-05012-03	SCREW PAN 5*12	4
F03 71		95100-05000-03	NUT FLANGE 5MM	4
F03 72		17310-4008-9000-4	CABLE COMP THROT	1
F03 73		93201-05010-03	SCREW PAN 5*10	1
F03 74		43450-GZ-9000-B	CABLE COMP RR BRK	1
F03 75		43472-GZ-9000	SPG RR BRK ARM	1
F03 76		95015-32001	JOINT B BRAKE ARM	1
F03 77		95015-42000	NUT B ADJUST	1
F03 78		53205-BWS-9000	STAY HANDLE RR	1
F03 79		93401-42012-03	SCREW TAPPING 4.2*12	2
F03 80		93201-05010-03	SCREW PAN 5*10	2
F03 81		95801-05000-03	WASHER 5MM	2
F03 82		3520A-BWS-9000	SW ASSY LH HNDL	1
F03 83		53178-BWS-9000	LEVER STRG HANDLE	1
F03 84		35340-BWS-9000	SW ASSY FR STOP	1
F03 85		3515A-BWS-9000	SW ASSY RH HNDL	1

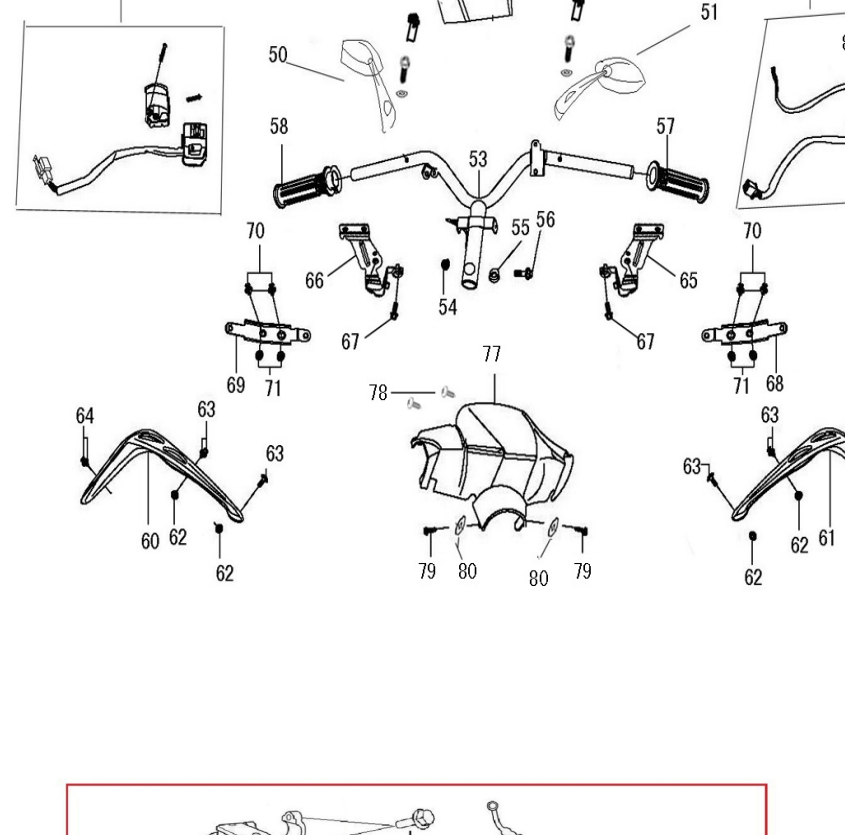


Regostar Service Parts F04

Part No.	Group	Code (US)	Item	QTY
F04 85		4550A-BWS-E000	SUB HARNESS SET FR M/C COMP	1
F04 86		45501-BWS-E000	CARTRIDGE BODY	1
F04 87		53175-BWS-9000	HANDLE	1
F04 88		32106-BWS-9000	SUB HARNESS	1
F04 90		10099-BWS-9000	SHUT-OFF BLOCK CONSTITUTE FR	1
F04 91		92101-06022-03	BOLT FLANGE 6*22 (G)	2
F04 92		45126-BWS-9000	HOSE ASSY FR BRK	1
F04 93		92101-06022-03	OIL BOLT 10*22	2
F04 94		90046-BWS-9000	WASHER 6MM	1
F04 95		45200-BWS-E000	CALIPER ASSY FR	1
F04 96		45105-BWS-E000	PAD COMP A	1
F04 97		45106-BWS-E000	PAD COMP B	1
F04 98		92201-08030-03	SCREW TAPPING 4.8*12	2

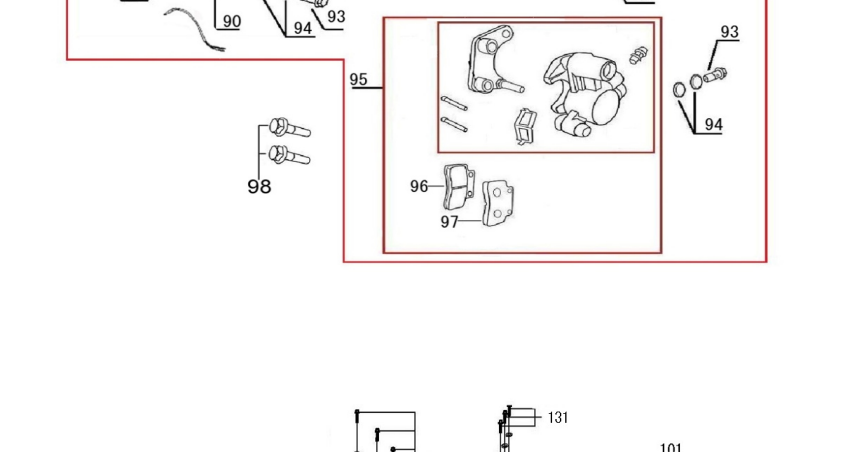


Regostar Service Parts F05

Part No.	Group	Code (US)	Item	QTY
F05 100		64301-BWS-9000	COVER FR	1
F05 101		93401-42012-03	SCREW TAPPING 4.2*12	2
F05 102		64303-BWS-9000	LID FR COVER	1
F05 103		43434-FR-9000	FR COVER RUBBER	1
F05 104		64302-BWS-9000	MOLDING FRONT	1
F05 106		93401-42016-03	SCREW TAPPING 4.2*16	2
F05 107		93401-48016-03	SCREW TAPPING 4.8*16	2
F05 108		90601-FR-9000	NUT SPRING 4MM	2
F05 109		50613-BWS-9000	FR & BULB COVER	1
F05 111		93401-48016-03	SCREW TAPPING 4.8*16	8
F05 112		90601-FR-9000	NUT SPRING 4MM	2
F05 120		64304-BWS-9000	LEG SHIELD	1
F05 121		81142-BWS-9000	LID LEG SHIELD	1
F05 122		92101-06016-03	BOLT FLANGER 6*16	1
F05 123		93401-48016-03	SCREW TAPPING 4.8*16	2
F05 124		90601-FR-9000	NUT SPRING 4MM	2
F05 126		64308-BWS-9000	LID INNER BOX	1
F05 127		93401-42012-03	SCREW TAPPING 4.2*12	6
F05 130		64310-BWS-9000	FLOOR PANEL	1
F05 131		92101-06016-03	BOLT FLANGER 6*16	6
F05 135		50326-BWS-9000	COVER BATTERY	1
F05 136		93401-48012-03	SCREW TAPPING 4.8*12	2

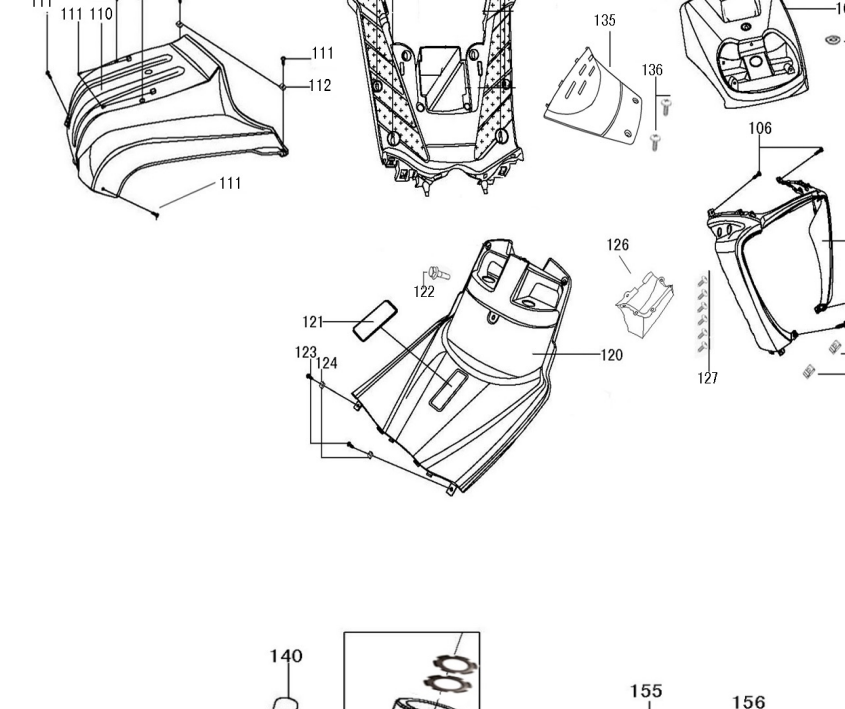


Regostar Service Parts F06

Part No.	Group	Code (US)	Item	QTY
F06 140		53200-BWS-9000	STEM COMP STRG	1
F06 141		50300-BWS-9000	RACE STRG COMP	1
F06 142		53221-BWS-9000	TOOTH LOCK	2
F06 143		53222-BWS-9000	DUST CAP	1
F06 144		53211-BWS-9000	RACE STRG TOP CONE	1
F06 145		53213-BWS-9000	BALL STEEL UP	1
F06 146		50301-BWS-9000	RACE UP STRG BALL	1
F06 147		50302-BWS-9000	RACE (STRG BOT) BALL	1
F06 148		53214-BWS-9000	BALL STEEL DOWN	1
F06 149		53212-BWS-9000	RACE (STRG BOTTOM) CONE	1
F06 142		92201-10040-03	BOLT FLANGER 10*40	4
F06 143		51500-BWS-9000	CUSHION ASSY FR L	1
F06 144		51400-BWS-9000	CUSHION ASSY FR R	1
F06 145		45128-BWS-9000	CLAMP C FR BRAKE HOSE	1
F06 146		45156-BWS-9000	LEVER STRG FR BRK CABLE	1
F06 147		92101-06012-03	SCREW TAPPING 4.2*12	2
F06 150		51408-BWS-9000	COVER CUSHION ASSY FR L	1
F06 151		93201-05008-03	SCREW PAN 5*8	2
F06 155		61100-BWS-9000	ASSY FR INNER FENDER	1
F06 156		92101-06016-03	BOLT FLANGER 6*16	3
F06 157		95801-06000-03	WASHER 6MM	3

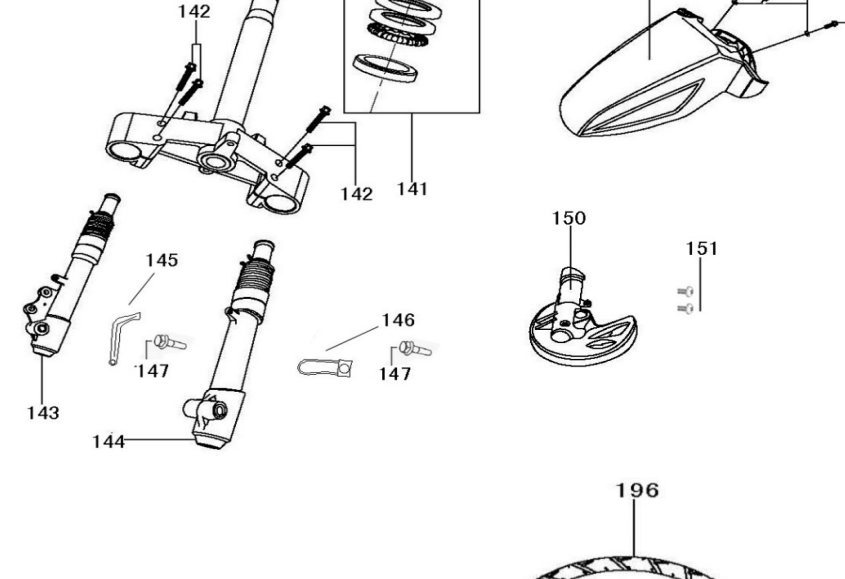


Regostar Service Parts F07

Part No.	Group	Code (US)	Item	QTY
F07 190		44600-BWS-9000	WHEEL SET FR MT3 50X10	1
F07 191		44601-BWS-9000	WHEEL FR CAST	1
F07 192		90754-BWS-9000	DUST SEAL	1
F07 193		44620-BWS-9000	COLLAR FR DIST	1
F07 194		90912-BWS-9000	BEARING 6201 LLU	2
F07 195		43111-BWS-9000	COLLAR FR WHEEL SIDE	1
F07 196		42753-FR-9000-A/B/C/D	VALVE/PVR 70&CAPE)	1
F07 197		44800-BWS-9000	GEAR BOX ASSY	1
F07 198		95501-10000-03	NUT U FLANGE 10MM	1
F07 199		44710-BWS-9000-A/B/C/D	TIRE ASSY (120/90-10)	1
F07 197		94401-08025-02	BRK DISK	3
F07 198		44301-BWS-9000	AXLE FR WHEEL	1

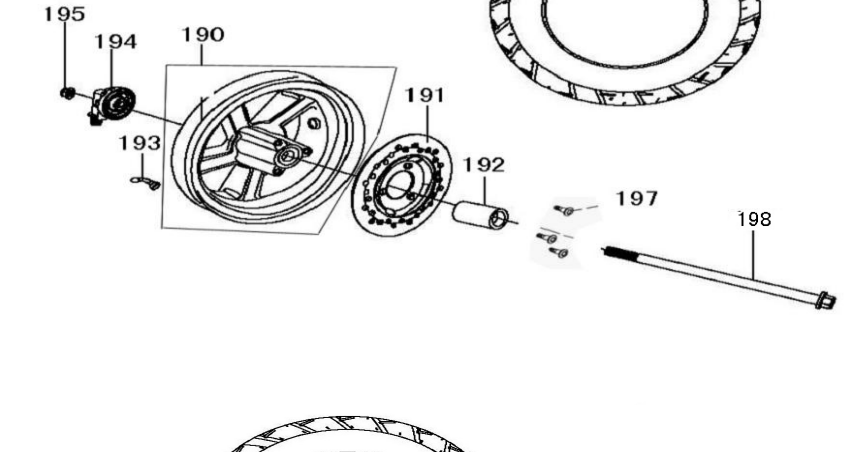


Regostar Service Parts F08

Part No.	Group	Code (US)	Item	QTY
F08 220		42600-BWS-9000	WHEEL COMP RR CAST MT3 50X10	1
F08 221		44710-FR-9000-A/B/C/D	TIRE ASSY (130/90-10)	1
F08 222		42753-FR-9000-A/B/C/D	VALVE/PVR 70&CAPE)	1
F08 223		4312A-BWS-E000	DISK SET BRAKE	1
F08 224		43120-BWS-E000	DISK FR BRAKE	1
F08 225		45133-BWS-9000	SPRING BRAKE SHOE	2
F08 226		43142-DGW-9000	RETURN SPG	1
F08 227		43143-DGW-9000	PREVENT DUST COVER	1
F08 228		43141-DGW-9000	CAM RR BRK	1
F08 229		43410-DGW-9000	ARM COMP RR BRAKE	1
F08 230		92401-06032-03	BOLT FLANGER 6*32	1
F08 230		95501-16000-03	NUT U 16MM (G)	1

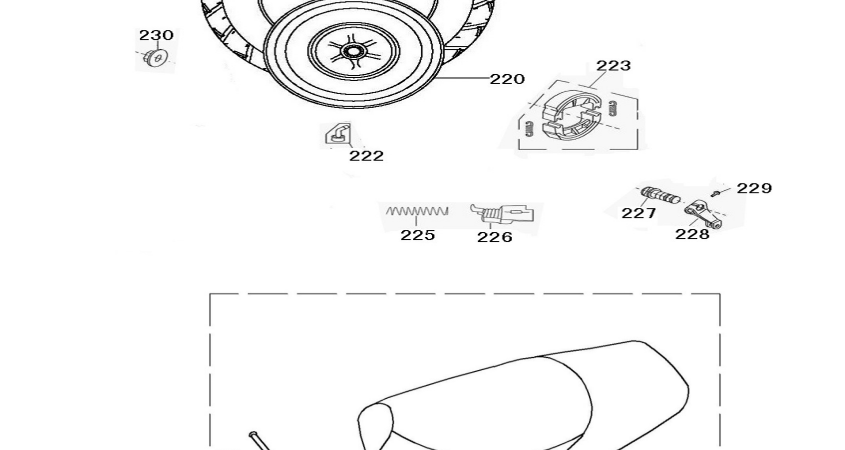


Regostar Service Parts F09

Part No.	Group	Code (US)	Item	QTY
F09 250		7720A-BWS-9000	SEAT ASSY	1
F09 251		77200-BWS-9000	SEAT	1
F09 252		77201-BWS-9000	HINGE SEAT	1
F09 253		77202-BWS-9000	AXIS HINGE SEAT	1
F09 254		95201-06000-08	NUT FLANGE 6MM (C)	2
F09 255		95201-06000-03	NUT FLANGE 6MM	2

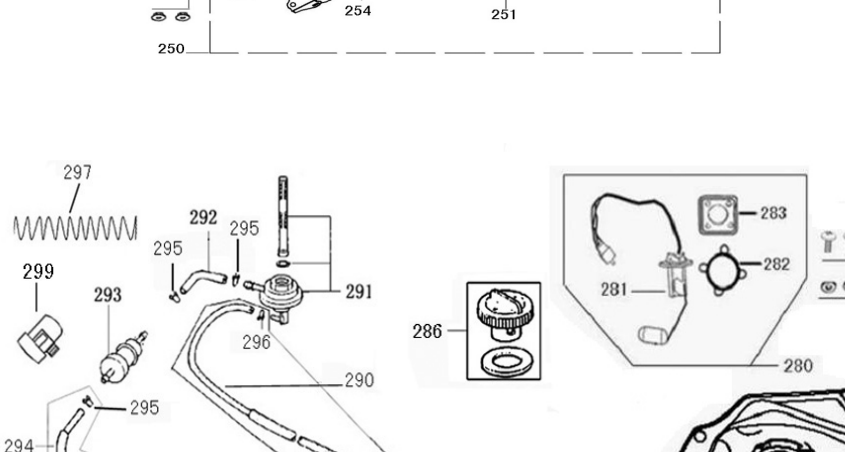


Regostar Service Parts F10

Part No.	Group	Code (US)	Item	QTY
F10 280		3780A-BWS-9000	FUEL UNIT ASSY	1
F10 281		37800-BWS-9000	FUEL UNIT	1
F10 282		37801-NGV-9000	PACKING	1
F10 283		37802-NGV-9000	RET FUEL UNIT	1
F10 284		92101-05016-03	SCREW TAPPING 4.2*16 (G)	4
F10 285		95803-05000-03	WASHER 5MM (G)	4
F10 286		17620-FR-9000	CAP COMP FUEL FILLER	1
F10 287		17620-BWS-9000	TANK COMP FUEL	1
F10 288		92101-06016-03	BOLT FLANGE 6*16 (G)	2
F10 290		17680-BWS-9000	TUBE ASSY VACUUM	1
F10 291		16950-DGW-9000	AUTO COCK ASSY FUEL	1
F10 292		1768A-BWS-9000	TUBE FUEL ASSY I	1
F10 293		16910-DGW-9000	STRAINER COMP FUEL	1
F10 294		1768C-BWS-9000	TUBE FUEL ASSY II	1
F10 295		19411-FR-9000	CLIP HOSE 48.5	4
F10 296		19414-FR-9000	CLIP HOSE 46.5	1
F10 297		90010-DGW-9000	SPG FUEL TUBE I	1
F10 298		90016-KY-9100	SPG FUEL TUBE II	1
F10 299		16914-FR-9000	HOLDER	1

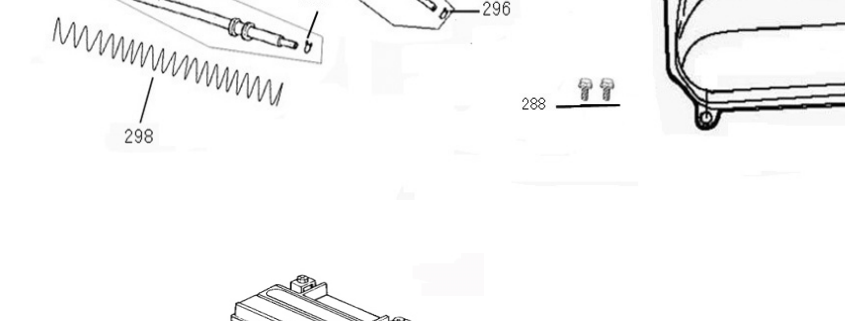

Regostar Service Parts F11

Part No.	Group	Code (US)	Item	QTY
F11 310		31500-FR-A000-A00A	BATTERY YTX7A-BS	1
F11 310		31500-FR-A000-A00B	BATTERY YTX7A-BS	1
F11 310		31500-FR-A000-A00C	BATTERY YTX7A-BS	1
F11 310		31500-FR-A000-A00D	BATTERY YTX7A-BS	1

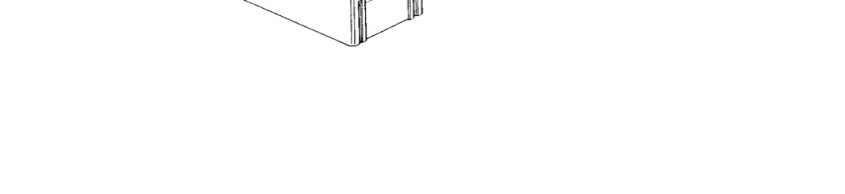

Regostar Service Parts F13

Part No.	Group	Code (US)	Item
----------	-------	-----------	------